

# THE NEVERLEAK COMPANY, LP

www.neverleakcompany.com

---

## Installation of Master Flash® Retrofit

### EPDM

Master Flash is a registered trademark of Aztec Washer.

**We stock grey retrofit only.**




**SELECT and TRIM...**  
Choose appropriate Retro Fit.  
If necessary trim opening to  
pipe diameter.



**WRAP...**  
Wrap Retro-Fit around pipe  
and install all snap rivets to  
seal flange.




**FORM...**  
Press Master Flash down, bending  
it to conform to roof profile or  
roof irregularities. A blunt tool  
will help press flashing into tight  
roof angles.

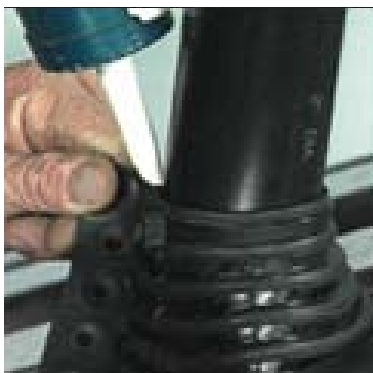

**SEAL...**  
Apply sealant between base  
and roof.



**FASTEN...**  
Use fasteners to complete  
sealing. For UPC installation,  
fastener spacing may not  
exceed 1-1/2" (38mm).

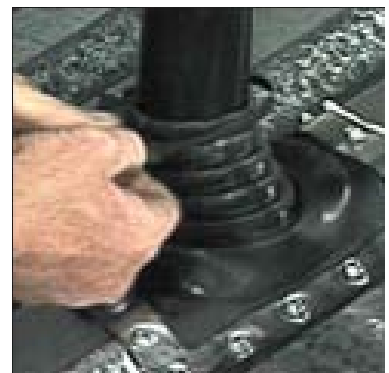

**INSTALL CABLE TIE...**  
Install supplied cable tie at  
uppermost part of Retro-Fit  
and apply sealant to any gaps.